




INSTRUCTIONS: *ems Effortless Countdown Timer*

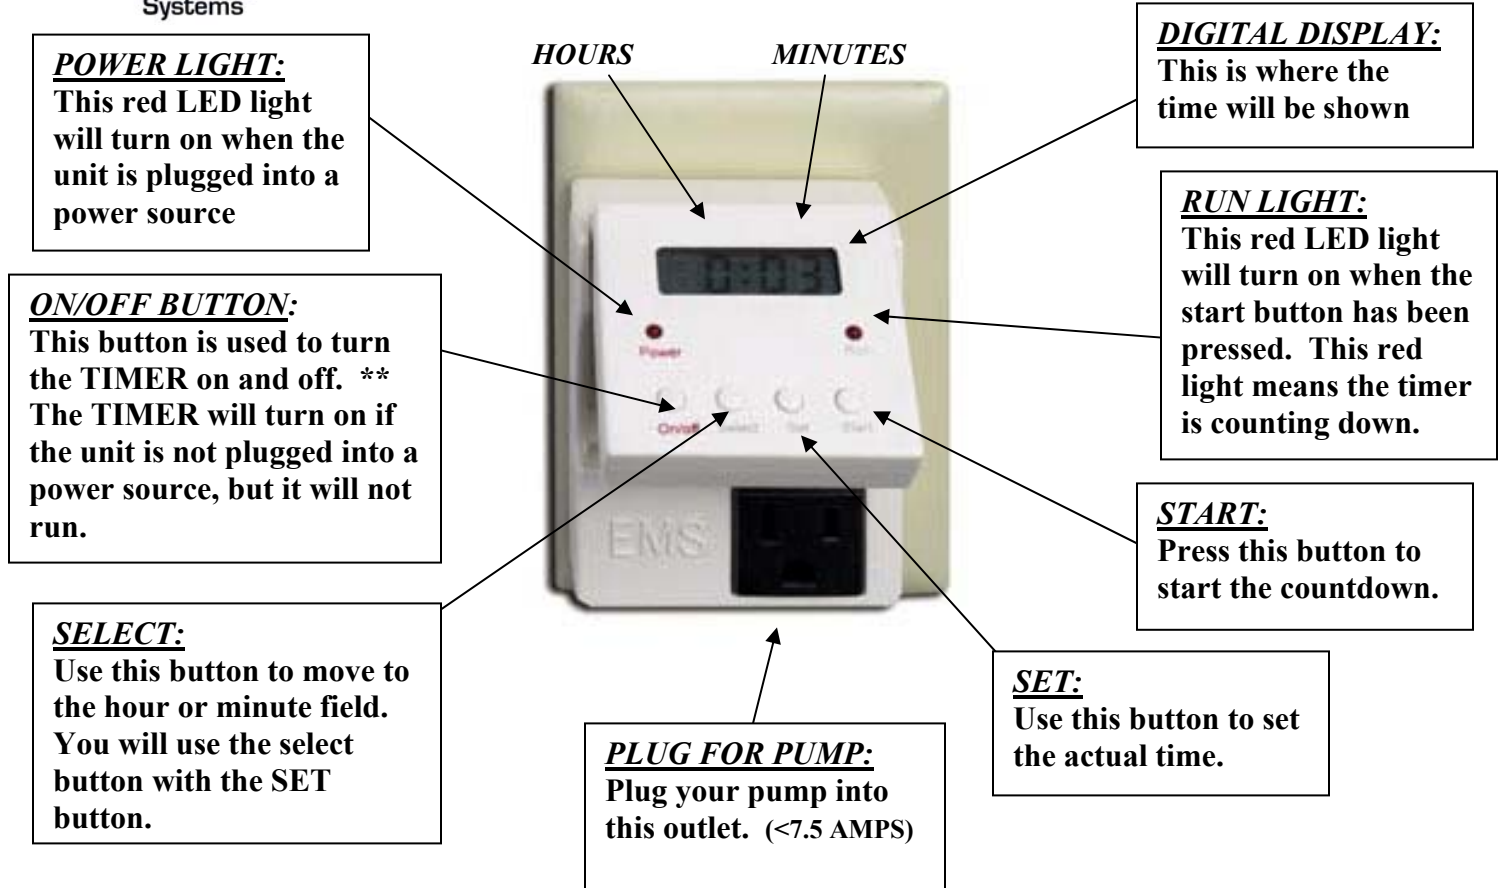

The ems Effortless Countdown Timer will run from 1 minute to 24 hours!

HOW TO OPERATE:

EXAMPLE: SET TIMER FOR 10 MINUTES

- 1.) Plug timer into power source. The red **POWER LIGHT** should be on.
- 2.) Press the **ON/OFF** button to turn the timer on. The **DIGITAL DISPLAY** should turn on.
- 3.) Press the **SELECT** Button. The first field on the digital timer will blink. Press the **SET** button until the first digital field shows “-“.
- 4.) Press the **SELECT** Button again to move to the second digital field. Press the **SET** button until the second digital field shows “0“.
- 5.) Press the **SELECT** Button again to move to the third digital field. Press the **SET** button until the third digital field shows “1”.
- 6.) Press the **SELECT** Button to move to the fourth digital field. Press the **SET** button until the third digital field shows “0”, then press **SELECT** one last time.
- 7.) Now your timer is set for 10 minutes. Plug the pump into the black plug under the timer and turn the pump **ON**. **THE PUMP WILL NOT TURN ON UNTIL YOU PRESS THE START BUTTON**
- 8.) Now press the **START** button on the timer. The timer will blink (:) and the pump will turn on. The red light on the **RUN** BUTTON will be on until the timer expires. When the 10 minutes is up, your pump will automatically turn off.

**Note: The ems Effortless Countdown Timer contains two internal batteries (Li ion #2016 3VDC) that provide power for the internal electronic circuitry. These batteries, while long lived, may need replacement periodically. Replacement batteries are available from EMS.*

Battery Installation:

- 1) Remove and retail the three Phillips head screws from the back of the display/program module*
- 2) Slip the old batteries from the holder*
- 3) Inserting the new batteries*
- 4) Replace the screws to compete reassembly.*